


# Export IFC file from Allplan

On this page, we will explain how to export an IFC file from Allplan for use in the SURAP webtool.


Note: For this demonstration, we will be using Allplan 2024. However, the guidance provided should remain applicable to all versions of Allplan that support exporting IFC 4 files.

To Export IFC File from Allplan:

1. Go to Allplan and open the project you need to Use
2. Go to **File** → **Export** → **Export IFC Data**

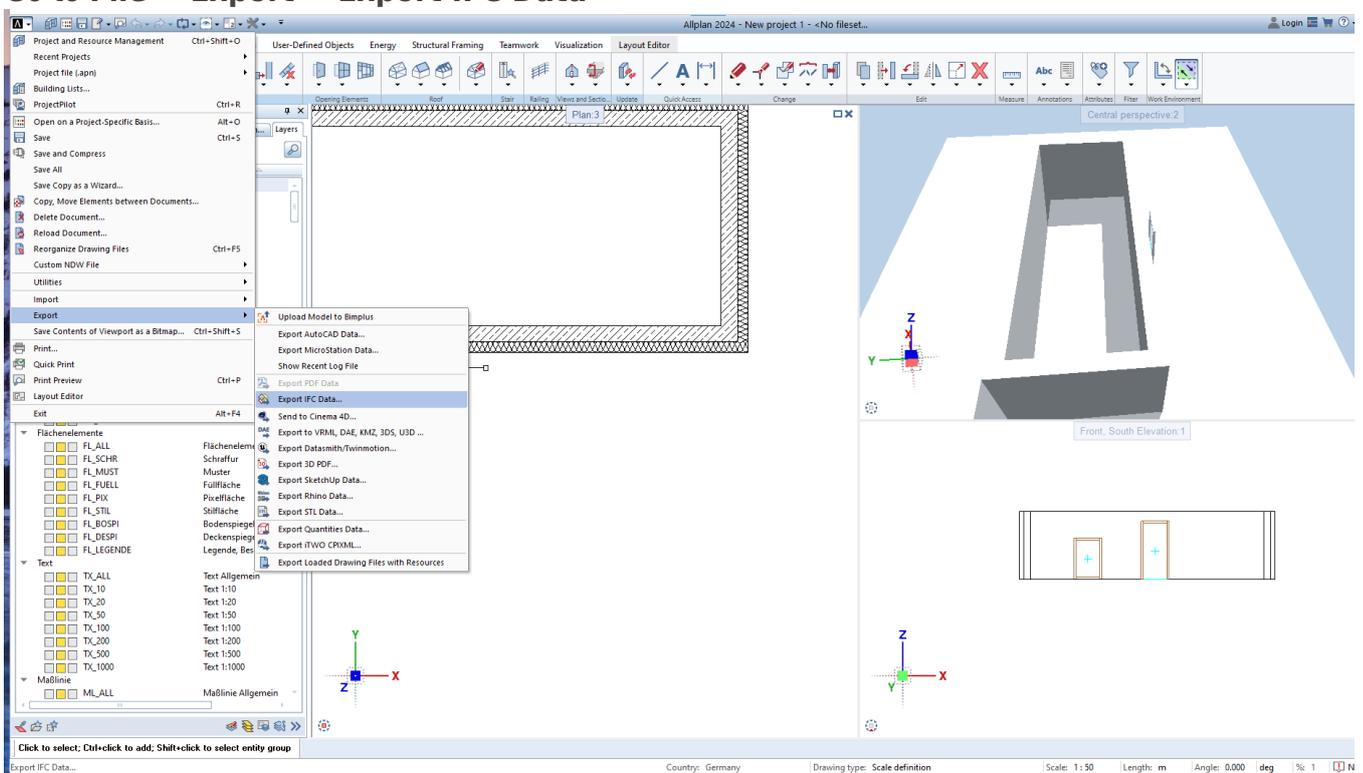

3. Select Exchange profile to be **IFC4 Reference View**

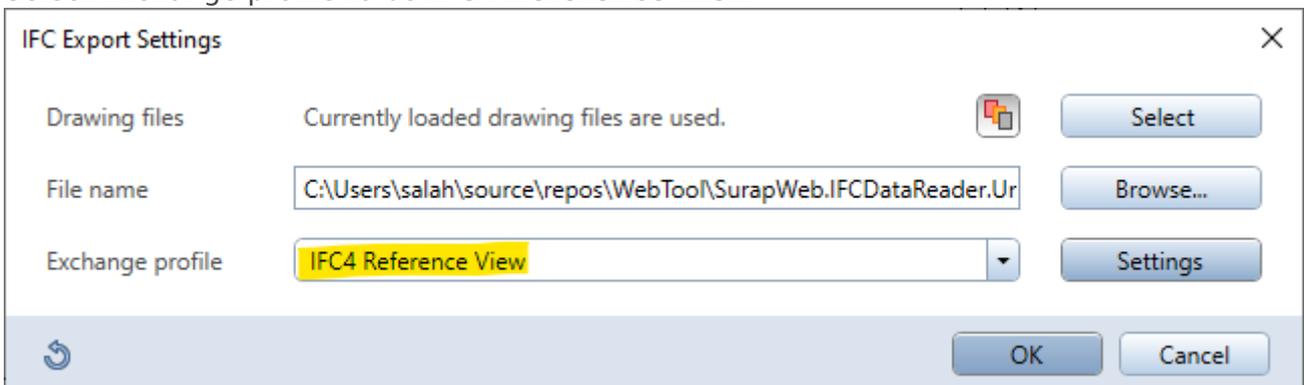

4. Press on **Ok** to save the file.

Revision #2

Created 21 August 2024 08:48:58 by Salah Aldeen Ayoubi

Updated 22 August 2024 07:03:00 by Salah Aldeen Ayoubi